

# Composite Coupler

## Cleaning Manual

# Composite Coupler - Disassembling

Step 1: Remove the CO2-Adapter

Step 2: Remove the Axis

Step 3: Remove the Handle

Step 4: Remove the Probe

Step 5: Remove the CO2-Gasket



# Composite Coupler - Cleaning

Step 6: Remove the Gasket, the Lipvalve & the O-Ring

Step 7: Remove the Gasket, the two O-Rings, the Ball & Captive

Step 8: Clean the CO2-Adapter

Step 9: Clean the Probe

Step 10: Clean the Body



# Composite Coupler – assembling

Step 11

Step 11: Assemble the Gasket, the Lipvalve & the O-Ring

Grease the O-Ring


Step 12: Assemble the Gasket, the two O-Rings, the Ball & Captive

Grease the two O-Rings

Step 13: Assemble the coupler

Step 12

Step 13

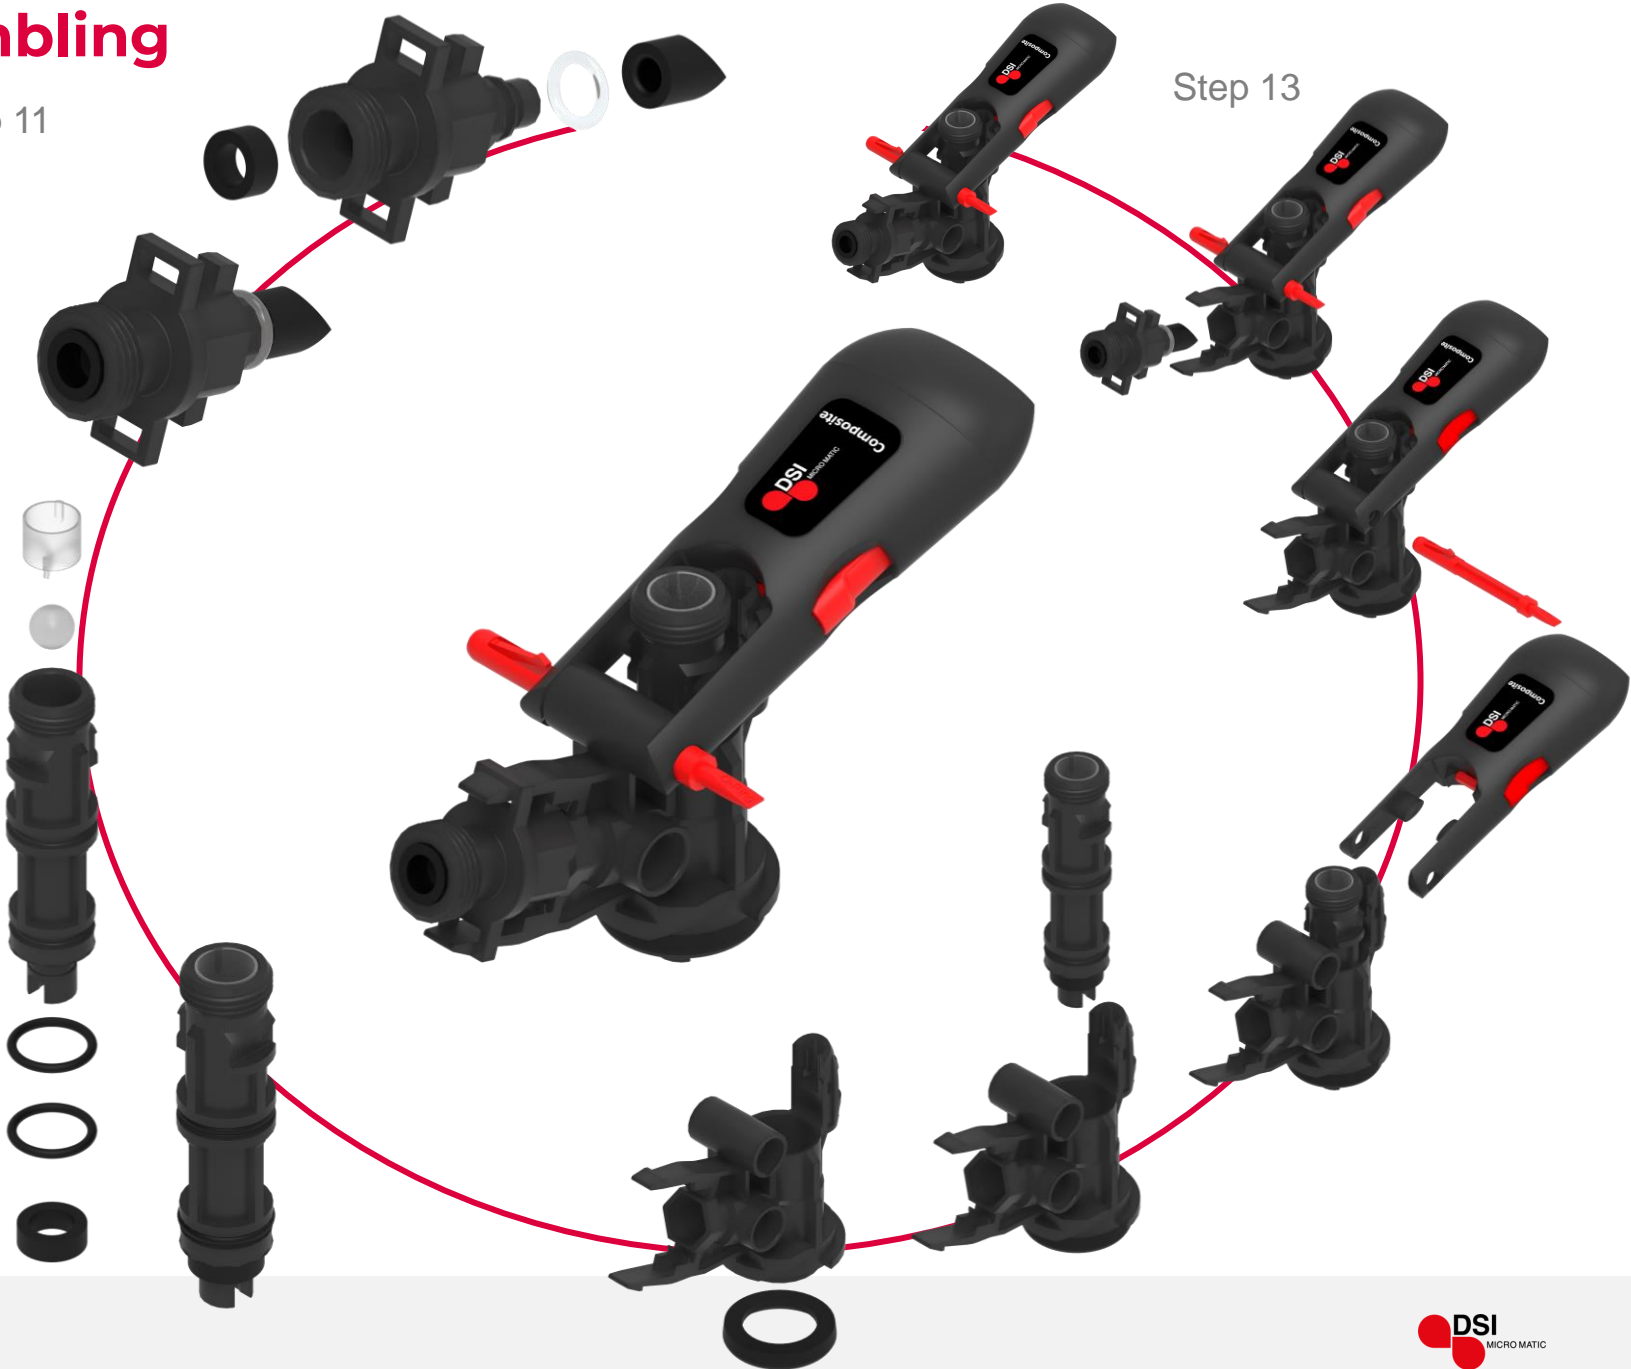

The logo icon consists of two overlapping red circles, one slightly above and to the left of the other.

# MICRO MATIC